



CDO-CI CIRCULAR **AR-RDB8P-HC**

AR-RDB8P-HC



DESCRIPTION

The equipment is used as a middle connect point or as a termination point for the feeder cable to connect with drop cable in FTTx communication network system. The fiber splicing, splitting, and distribution can be done in this box, and meanwhile it provides solid protection and management for de FTTx network building.

FEATURES

- **1** Total enclosed structure.
- 2 Material: PC+ABS, wet-proof, water-proof, dust-proof, anti-aging, protection level up to IP68.
- 3 Clamping for feeder cable and drop cable, fiber splicing, fixation, storage, distribution...etc all in one.
- 4 Cable, pigtails, and patch cords are running through their own paths without disturbing each other, micro type PLC splitter installation, easy maintenance.
- **5** Distribution panel can be flipped up, feeder cable can be placed by expression port, easy for maintenance and installation.
- **6** Box can be installed by the way of wall-mounted or poled-mounted, suitable for both indoor and outdoor use.

SPECIFICATION


- Environmental requirement Working temperature: -40 °C ~+85 °C Relative humidity: ≤85% (+30 °C). Atmospheric pressure: 70KPa~106Kpa.
- 2 Main technical datasheet Insertion loss: ≤0.15dB UPC return loss: ≥50dB APC return loss: ≥ 60dB.
- **3** Thunder-proof technical datasheet.
- The insulation resistance between the grounding device and the metal parts of the box is no less than $2 \times 104 \text{ M}\Omega/500\text{ V}$ (DC); IR $\ge 2 \times 104 \text{ M}\Omega/500\text{ V}$.
- The voltage resistance between the grounding device, and the box and its metal parts is no less than 3000V (DC)/min, no puncture, no flashover; $U \ge 3000V$.




CONFIGURATION TABLE

Table 1 Model and configuration

Model	Size (Pic 1) A*B*C	Max Capacity	Hang a wall to install size(Pic 2)D*E	Into the largest cable diameter (mm)
AR-RDB8P-HC	180*190*129	9 (SC/APC 1/8)	124*25	14

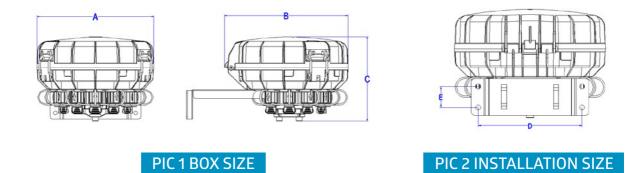


PRODUCT CABLE WAYS

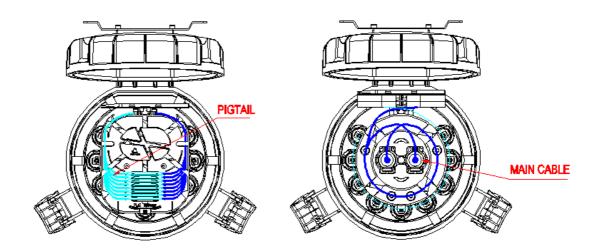

AR-RDB8P-HC



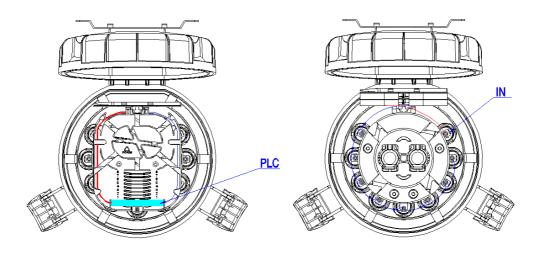

PIC.3 AR-RDB8P-HC CABLE WAYS


INSTALLATION


1 Wall-mounted installation.

Drill 4 holes into the wall based on the size in table 1, place the expansion bolt Φ 7.5*40, place the box to match up the holes and use bolt to fasten. (Pic 4).

2 Pole-mounted installation.

Fix 1 set of the pole ring to the telecom pole (Pic 5).

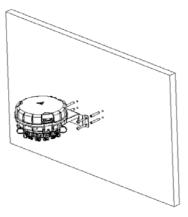

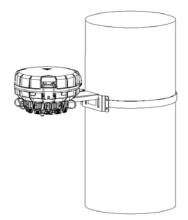


PIC 4 WALL MOUNTED INSTALLATION

PIC 5 POLE MOUNTED INSTALLATION



FIBER CONNECTOR INSTALLATION

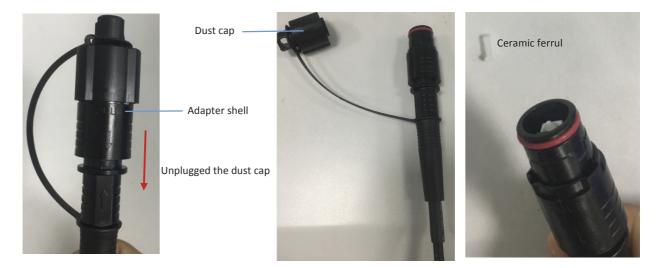

Pic 6 Remove the fiber connector dust cap and remove the ceramic ferrule cap



Pic7 Insert and Pull out the fiber connector

ACCESSORIES

- 1 Users' Manual*1.
- 2 Accessories Bag*1.
- **3** Pole Ring*2 (Option).